

Technical Info

- [Repair Logs](#)
- [Pacman fixes](#)
- [Manuals & Schematics](#)
- [Monitor Manuals](#)
- [Nintendo Game List](#)
- [Data I/O Promlink 6.10](#)

Spies Wiretap Archives

- [Coin-op Video Game List](#)
- [Game Conversions](#)
- [The Mixed Bag](#)
- [PCB Pinouts and DIPs](#)

PDF Game Artwork

- [Coin door inserts, etc.](#)
- [Instructions cards](#)
- [Operation Sheets](#)
- [Control Panel & Bezels](#)

Tutorials

- [Component markings...](#)
- [Crating a game](#)
- [Build your own cabinet](#)

Board Upgrades

- [Double Donkey Kong](#)

 
Wanted

- [Items I'm looking for](#)

Miscellaneous

- [Links](#)
- [Contact Us](#)

Certifications



DigDug

PARTS SIDE

SOLDER SIDE

1 -	GND	1 A	GND	- A
4 -	+5V	2 B	+5V	- D
10 -	SPEAKER (+)	3 C		
L -	SPEAKER (-)	4 D		
6 -	+12V	5 E		
		6 F		
15 -	TEST	7 H		
16 -	COIN 1	8 J	COIN 2	- T
V -	P2 START	9 K		
		10 L	P1 START	- 17
		11 M	P1 BUTTON 1	- 22
		12 N		
Jamma 20 -	P1 LEFT	13 P		
Jamma 21 -	P1 RIGHT	14 R	P1 DOWN	- 19 Jamma
		15 S	P1 UP	- 18 Jamma
		16 T		
P -	VIDEO SYNC	17 U	VIDEO GND	- 14
		18 V		
13 -	VIDEO BLUE	19 W	VIDEO RED	- 12
		20 X	VIDEO GREEN	- N
3 -	+5V	21 Y	+5V	- C
2 -	GND	22 Z	GND	- B